

 
CRUZE




FIT^{to}FRAME™

Venetian Blind - Adhesive Tape Mounting

YOU SHOULD HAVE

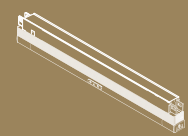


Blind

 

Side guides



 
Wand



Multi-tool



 
Handle

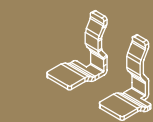

Adhesive brackets



 Alcohol wipe



Allen key



Locking clip



Headrail holder



 
Locking cover

CHILDREN CAN STRANGLE IF A SAFETY DEVICE IS NOT INSTALLED. ALWAYS USE A SAFETY DEVICE TO KEEP CORDS AND CHAINS OUT OF REACH OF CHILDREN.

THE INSTALLATION OF THIS PRODUCT SHOULD BE CONDUCTED BY SOMEONE COMPETENT IN DIY.


STEP 1

Remove contents from the packaging and lay out.

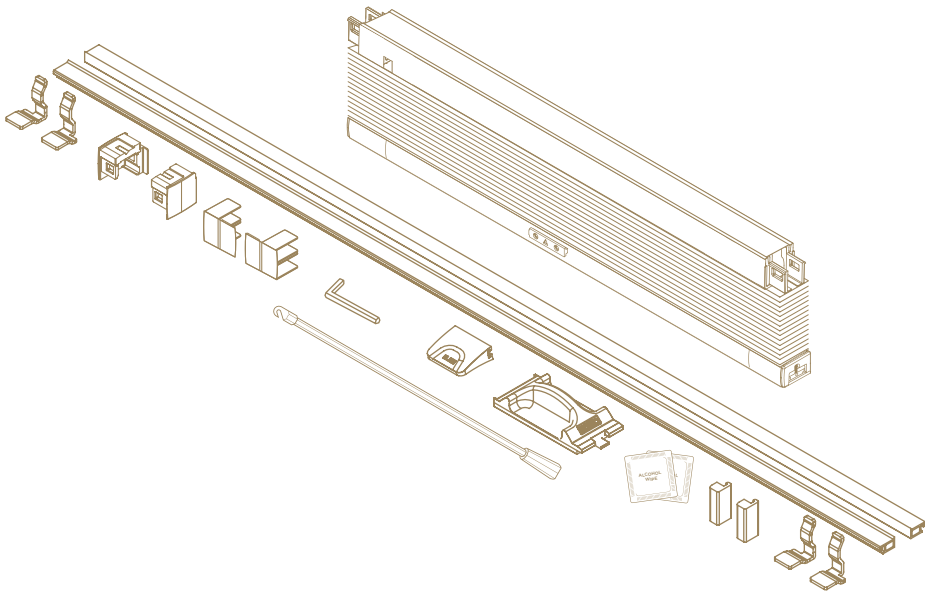


STEP 2

 Place adhesive brackets in the side guides as shown.

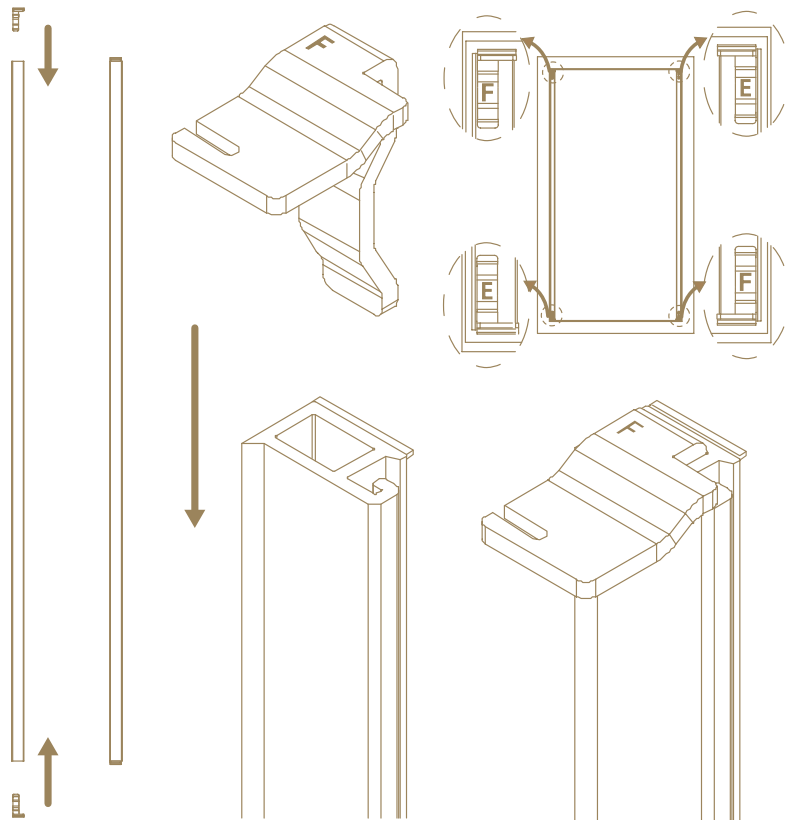

STEP 3

 Using the alcohol wipe provided, clean the area of the window glass in which the adhesive side guides will be placed and dry using a paper towel.

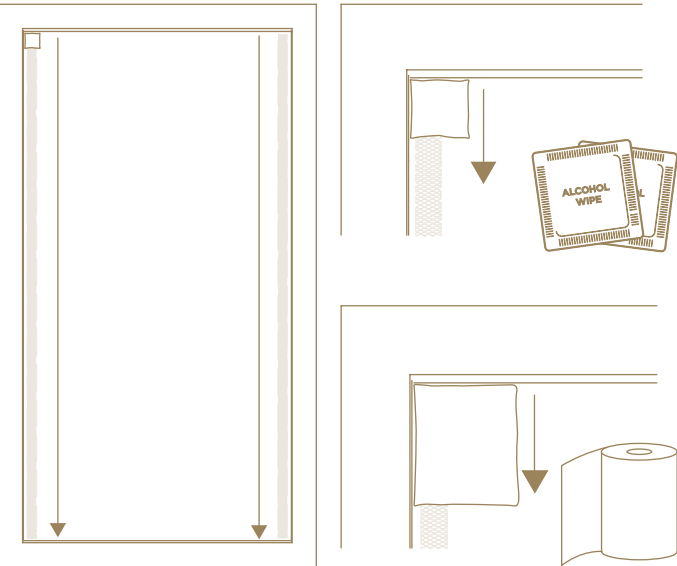

STEP 4

 
Peel off the protective layer on the adhesive strip located on the back of the side guide and apply to the window glass as shown. Install as close to the edge of the window beading as possible.



STEP 5


When attaching the handle, push flush with the bottom bar and slide until it has covered the screw block.

NOTE: Cruze logo needs to face up.

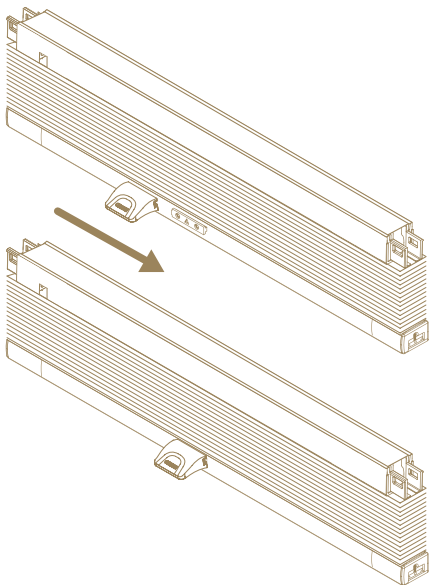


STEP 6

 Add top left and right headrail holders on top fixing brackets. Secure the headrail holder to the side guide using the locking clip on each side.

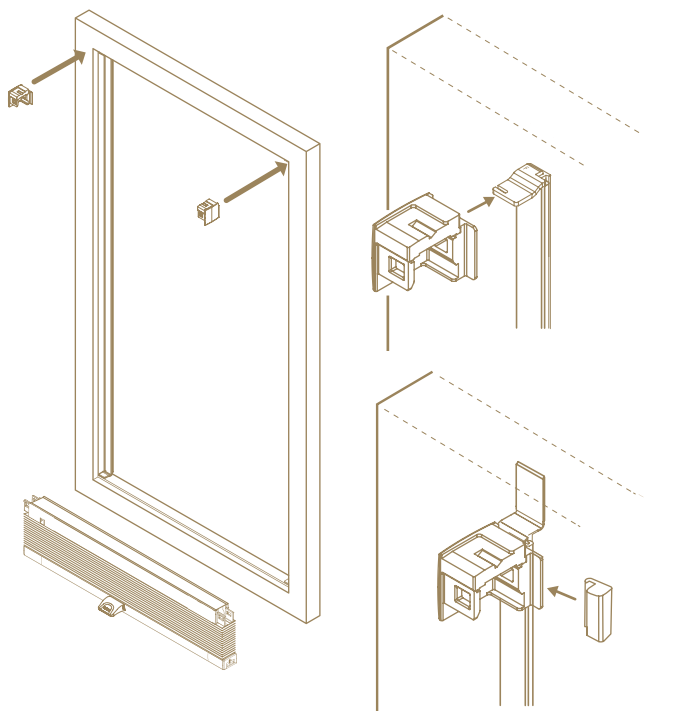


STEP 7

 Push the blind into headrail holders from the bottom, until you hear a click on left and right side.

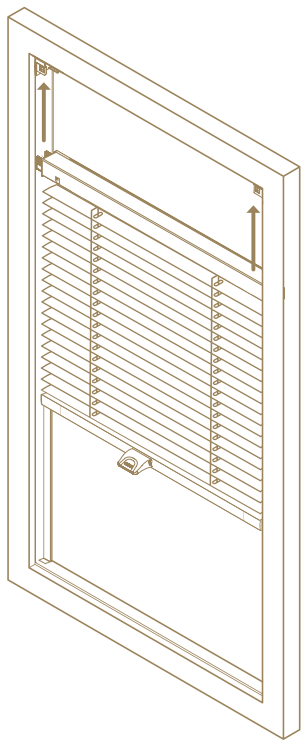


STEP 8

 Push the locking covers to both headrail holders from front as shown.

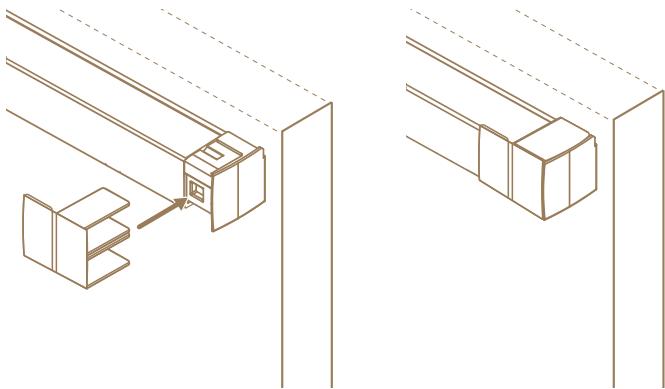

STEP 11

 
Attach the wand to tilter. Blind is ready to use.

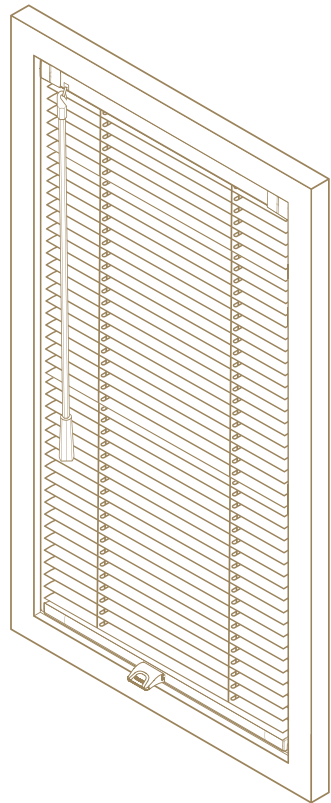

CORD RE-TENSIONING


STEP 1

 Grab the end of the cord at the bottom and loosen grub screw from the front using 1.5mm Allen key.

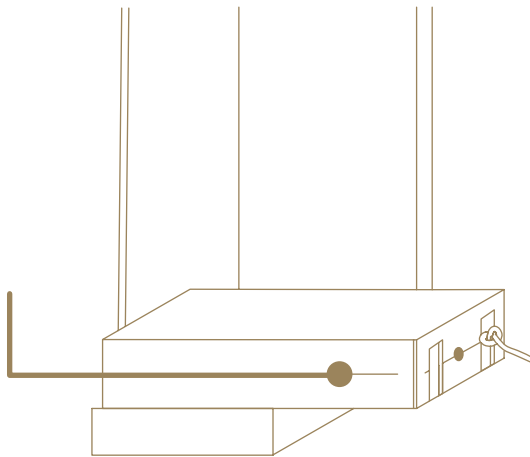


STEP 2

 Pull the cord to required tension and tighten the screw back again until cord is secured.

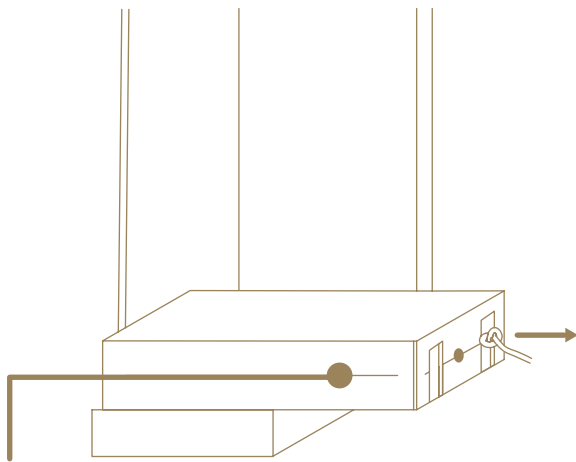


STEP 9

 Take the bottom left and right cord end caps as shown and place them over the fixing brackets.

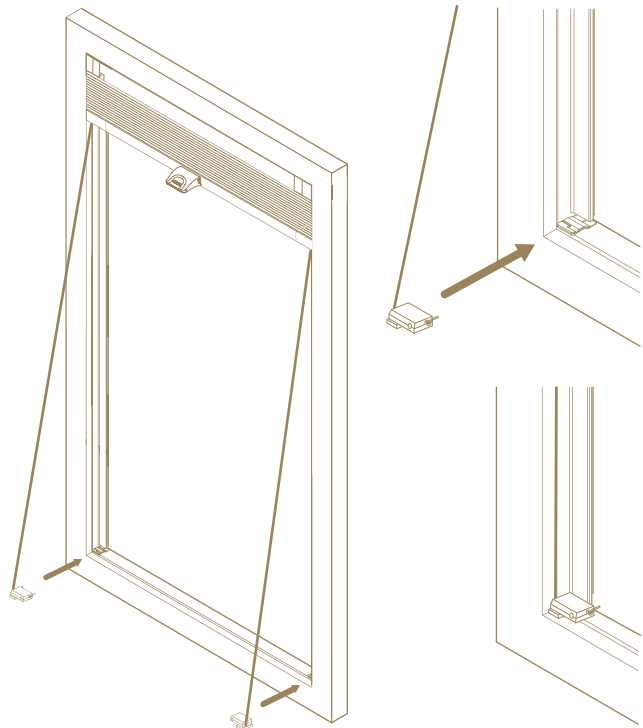


STEP 10

 Using the multi-tool, push the step profile end into the side clips behind the bottom bar and push towards the side guides until a click is heard.

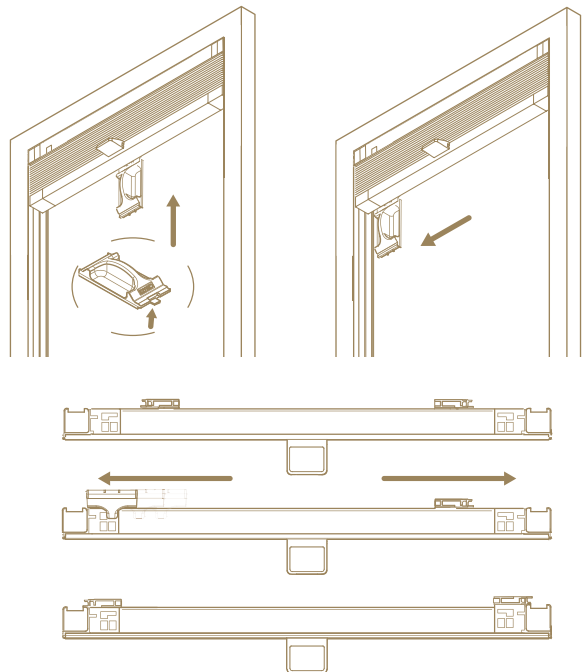

PLEASE READ THE INSTRUCTIONS BEFORE OPERATING THIS PRODUCT.

 OPERATION

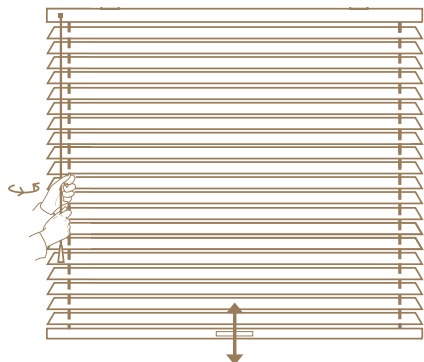

To raise and lower blind: Simply raise and lower the blind to the desired position by firmly holding the handle. Slats need to be open (horizontal) when raising or lowering the blind.

Slat angle: To adjust the angle of the slats twist the wand.

MAINTENANCE

The product is maintenance free, however we recommend that regular visual checks are completed to ensure that no components have been damaged, which could result in operating difficulties and/or cause a safety risk.

If any maintenance is required we recommend that the work is carried out immediately by a reputable blind company.

INSTALLATION VIDEO

Scan QR for installation video.



WARNING

Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product.

To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck. Move beds, cots and furniture away from window covering cords.

Do not tie cords together. Make sure cords do not twist and create a loop.

